

# PA- 20 /60 Mobile Computer

## Pistol Grip installation procedure

<http://www.argox.com>

### Installation procedure:

1. Move battery door latch from "LOCK" to "FREE" (Figure 1).
2. Insert sponge into LOCK location (Figure 2).

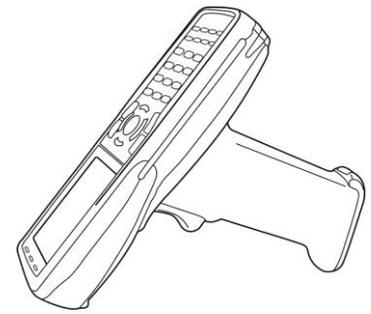


Figure 1

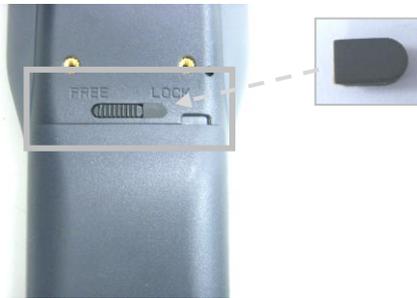


Figure 2

3. Remove battery cover.
4. Remove two screws which under battery cover (Figure 3).
5. Connect power cable of pistol grip with PA60 (Figure 4)
6. Combine Gun grip with PA60 (Figure 5).



Figure 3



Figure 4



Figure 5

7. Please make sure cable will not impede screw hole (Figure 6).
8. Lock up four screws (Figure 7).  
86-1AM2K-6R0 \*2  
86-1AM2K-100 \*2



Figure 6

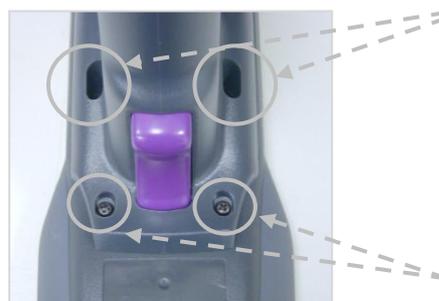


Figure 7

86-1AM2K-100



86-1AM2K-6R0



9. Installation completed.



\*49-PA602-001\*

49-PA602-001 Rev. A – Feb 2013

